BALE DOOR INSTALLATION INSTRUCTIONS



For questions and comments please don't hesitate to contact us!


Phone- 800.853.1611

13150 Airport Hwy. Swanton, OH. 43558 www.rammfence.com


Follow us for more content!


Bale Door Rough Openings 4 x 3'6 Rough Opening = 48"w x 43 3/8"h 4 x 4 Rough Opening = 48"w x 49 3/8"h



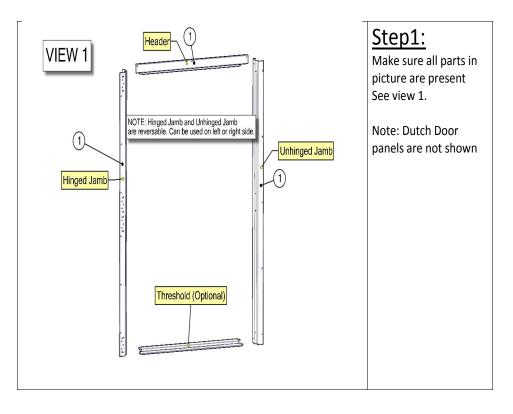


<u>Step 2:</u> Slide Header and Threshold (if applicable) into matching slots on the Hinged or Unhinged Jamb. Before bending tabs over, be sure to confirm jamb orientation for a left hand or right hand door. After tabs are bent, this cannot be reversed. See view 2 and 3

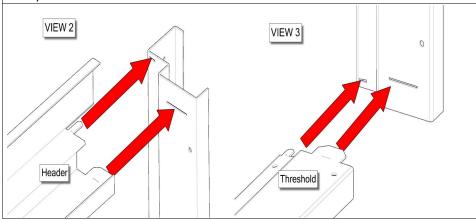

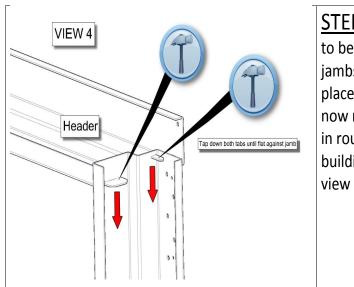

STEP 3: Use hammer to bend tabs. After jambs are locked in place by the tabs, it is now ready to be placed in rough opening on building. See view 4 and view 5.

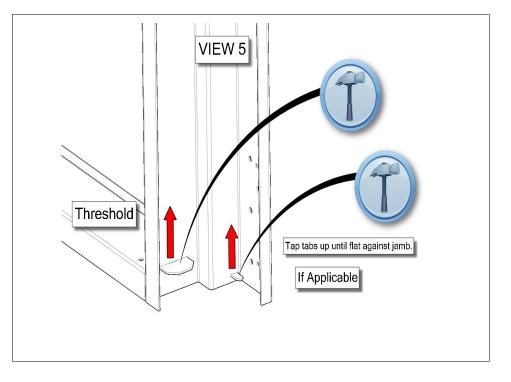

8 7 6		5		1	3		2		1	
	BOM Table									
	ITEM NO.	Description	Color	QTY.						
	1	Jamb Header		2						
	2	Hinged Jamb Side		1					D	
	3	Unhinged Jamb Side		1						
	4	Door Panel		1			C			
A (X6)	Α	2" Wood Screw	Blue	25				4) (1)	\frown	
· · · · · · · · · · · · · · · · · · ·	В	3/4" Flat machine Screw	Red	10				•		
	С	Rubber Bumper	Black	2			•	• •		
	D	Jamb Hinge	Silver	2		/				
B (x10) A (x6)	F	D-Handle	Maroon	1	2					
B (X10) A (X6)									С	
							\rightarrow	• 🔨	•	
A (x5)								$\langle \rangle$		
C (x2)		-		C		·/ /		\backslash	∖ • (F)	
		L L						• •		
		Α 📀	(o		
۰ ۰ ۰				•		D (•	В	
			D)		`D (x	4)	E (x 3	3)	

		B		0						
				O						
				0						
				O						
) Corios	Installation	A	
		PROPRIETARY AND CONFIDENTIAL			COMMENTS:	200RI	2 series		n Instructions	
		THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF	Swanton, OH. 43558	rport Hwy. OH 43558				SIZE DWG. NO.	REV	
		RAMM. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF RAMM IS PROHIBITED.		53-1611		DRAWN	CBM 1-3-13	3 D	G	
			1		DO NOT SCALE DRAWING	CHECKED		SCALE: 1:12 WEIGHT		
8 7 6		5		4	3		2		1	

D

С

В

А

