

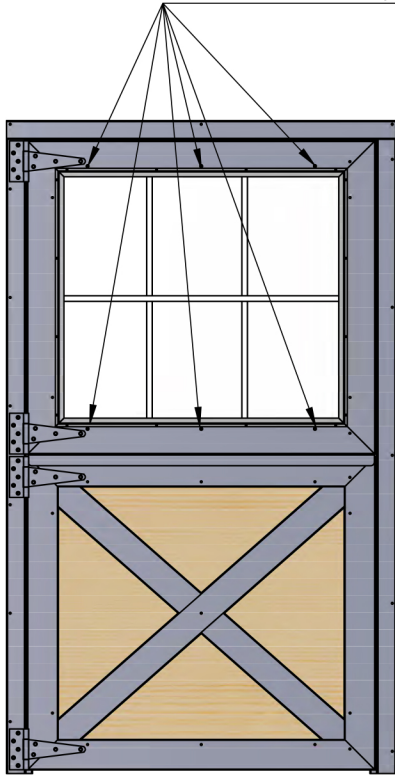


Step 1: Remove these 6 bolts from door. Leave T-Nuts in back of door and insert 2 1/2" bolts from kit.

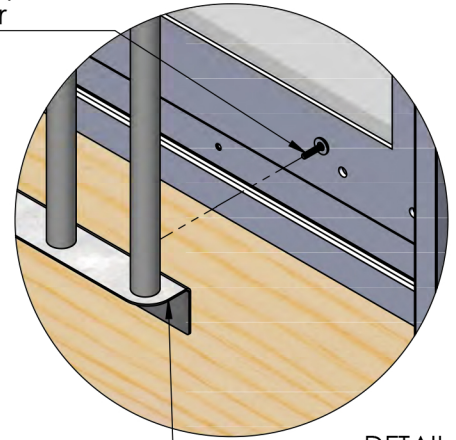

Step 2: Slide grill over 2 1/2" bolts on back of door

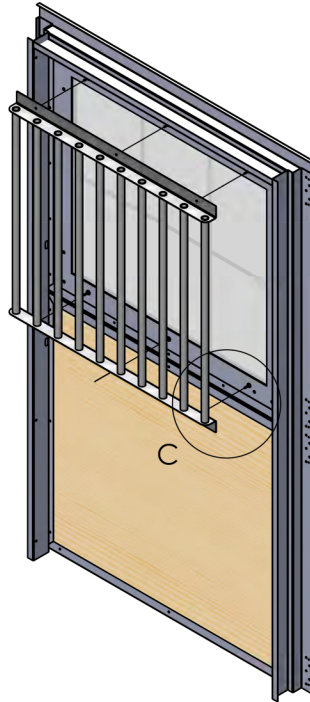

DETAIL C
SCALE 1 : 5

Step 3: Fasten grill with 12-24 lock nuts in kit

Step 4: Finished

PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS
DRAWING IS THE SOLE PROPERTY OF
RAMM. ANY REPRODUCTION IN
PART OR AS A WHOLE WITHOUT THE
WRITTEN PERMISSION OF RAMM
IS PROHIBITED.

5

13150 Airport Hwy.
Swanton, OH. 43558
800-853-1611
www.rammfence.com

4

2520 Dutch Door/Bale Door
Window Grill Installation Instructions



RAMM
Horse Fencing & Stalls