## BALE DOOR INSTALLATION INSTRUCTIONS



For questions and comments please don't hesitate to contact us!

Phone- 800.853.1611

13150 Airport Hwy. Swanton, OH. 43558


www.rammfence.com

Follow us for more content!

Bale Door Rough Openings 4 x 3'6 Rough Opening = 48"w x 43 3/8"h 4 x 4 Rough Opening = 48"w x 49 3/8"h






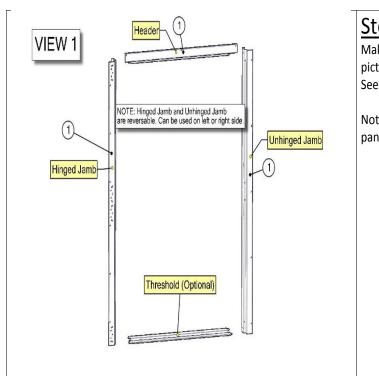

## Step1:

Make sure all parts in picture are present See view 1.

Note: Dutch Door panels are not shown

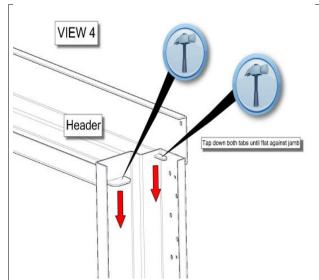

STEP 3: Use hammer to bend tabs. After jambs are locked in place by the tabs, it is now ready to be placed in rough opening on building. See view 4 and view 5.

<u>Step 2:</u> Slide Header and Threshold (if applicable) into matching slots on the Hinged or Unhinged Jamb. Before bending tabs over, be sure to confirm jamb orientation for a left hand or right hand door. After tabs are bent, this cannot be reversed. See view 2 and 3

