


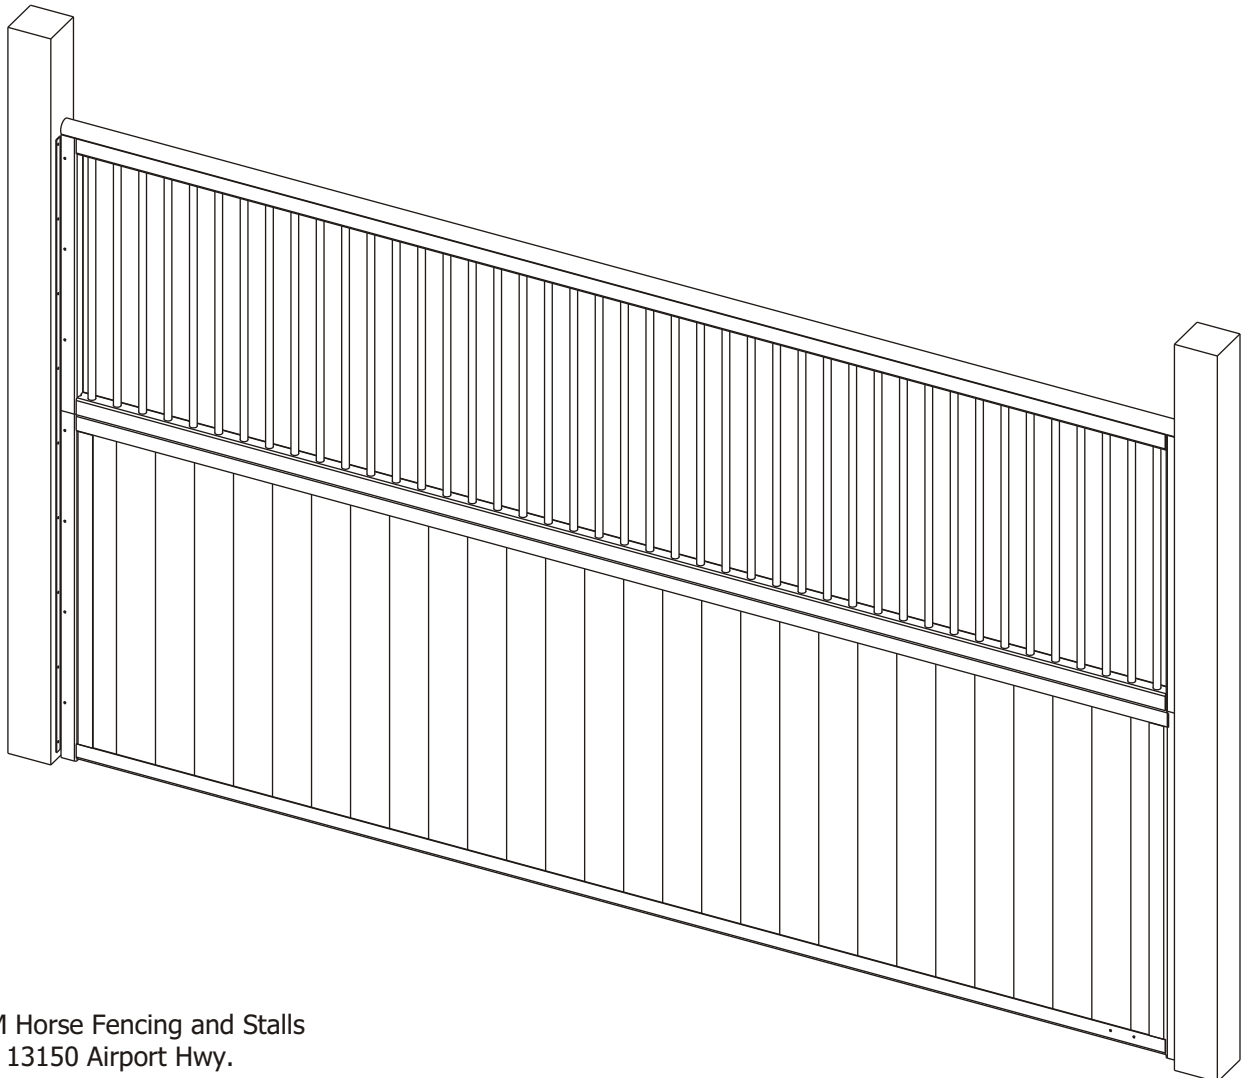


Tuscany Partition

Installation Instructions



Before You Start

Tuscany partitions come as a separate top and bottom section that needs to be assembled prior to installation.

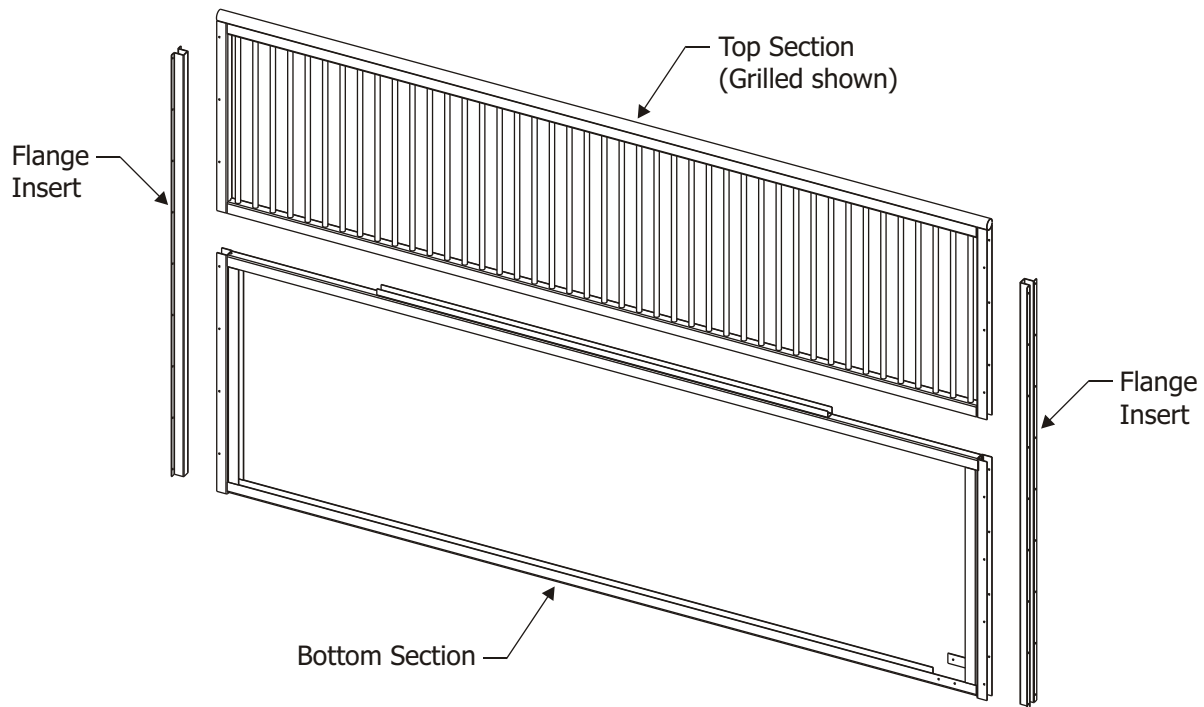

Connect Sections Together



Align top and bottom sections.

Bring sections together so upward facing insert channel on bottom section fits up into channel of top section.

Use a rubber mallet as necessary to help with alignment and fitting sections together. A C-clamp may be useful to bring sections together but be careful not to damage finish.

HINT: Use foam and blocks from packaging.


Fasten sections together with provided Clip Screws through holes in bottom channel of top section.

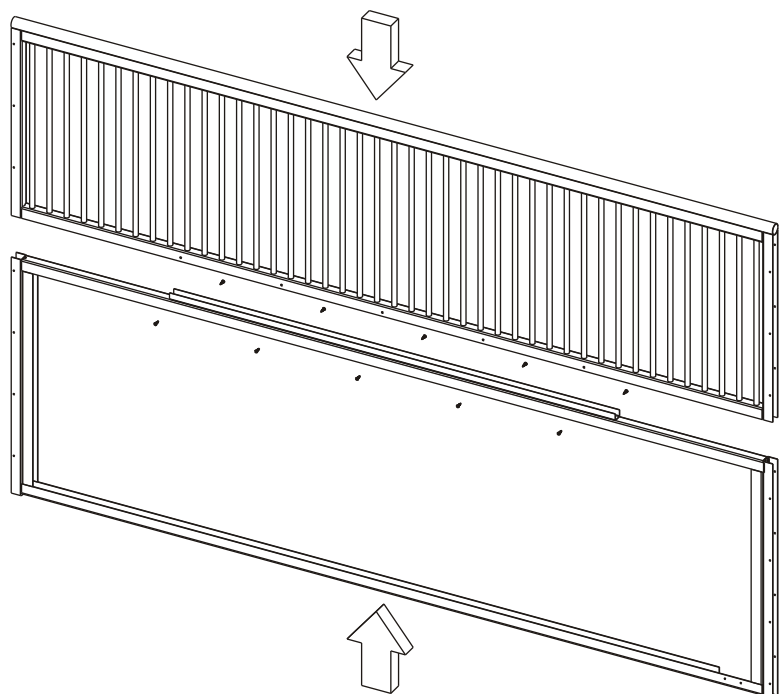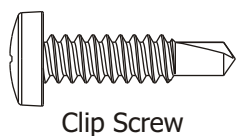

Slide in Flange Inserts

Slide Flange Inserts into both ends of the assembled partition.


DO NOT fasten Flange Inserts to partition at this time.

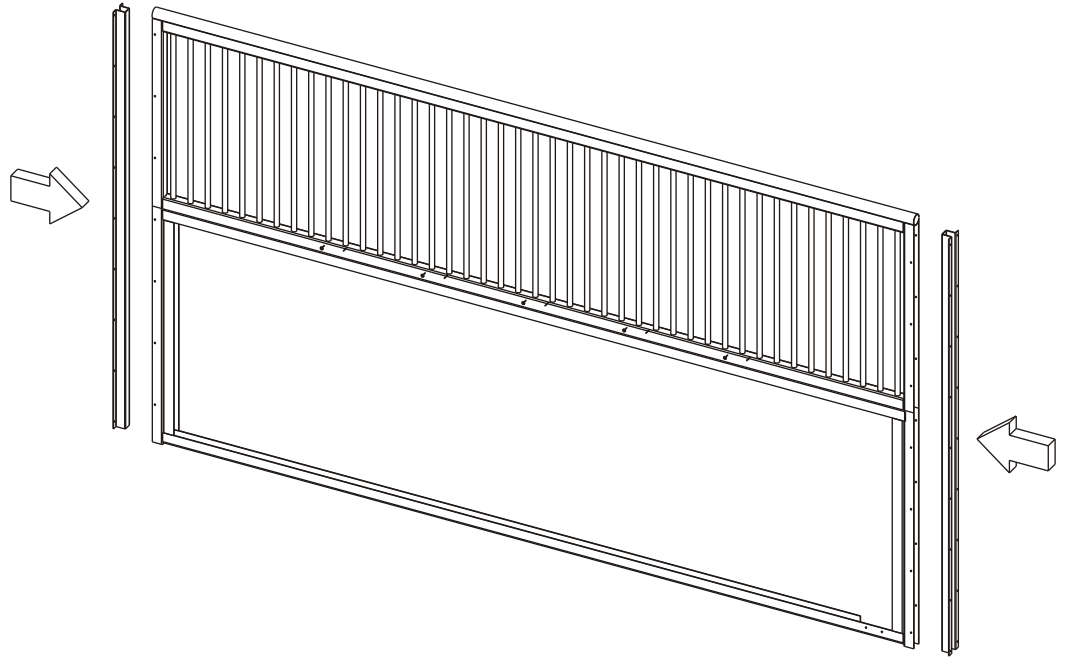


Set Partition into Opening

Set partition between posts/walls.


Fasten Flange Inserts to posts/walls with supplied screws.

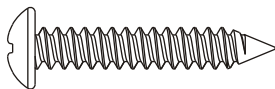

SS1 Screw
(Wood Posts/Walls)

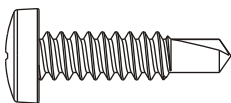


Clip Screw
(Metal Posts/Walls)

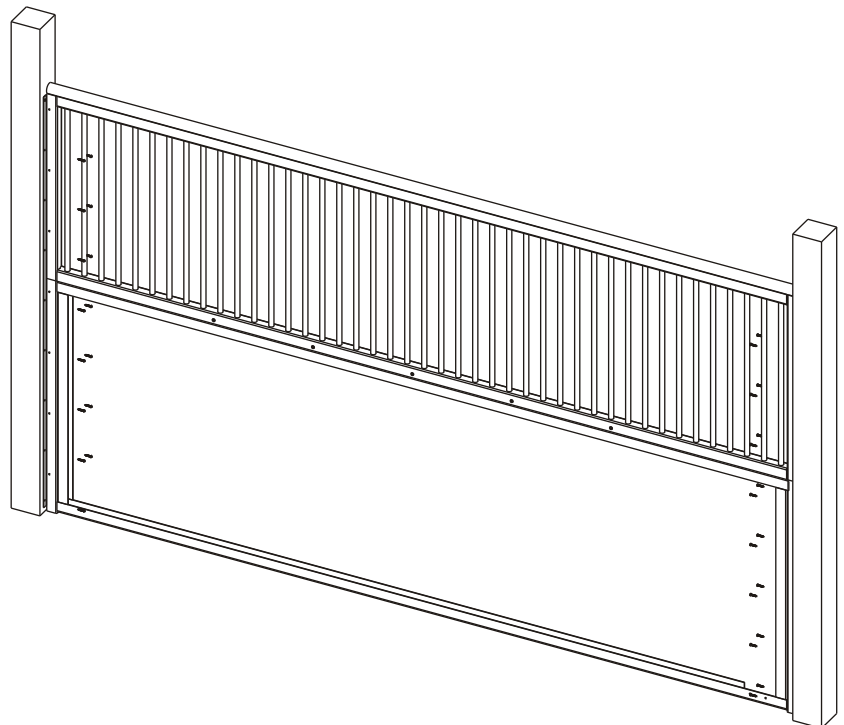


Fasten Partition to Flange Inserts

Fasten partition to Flange Inserts with supplied Clip Screws. It is recommended to pre-drill 1/8" dia. holes at each hole location.

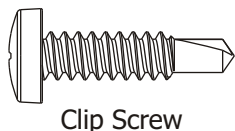

Clip Screw

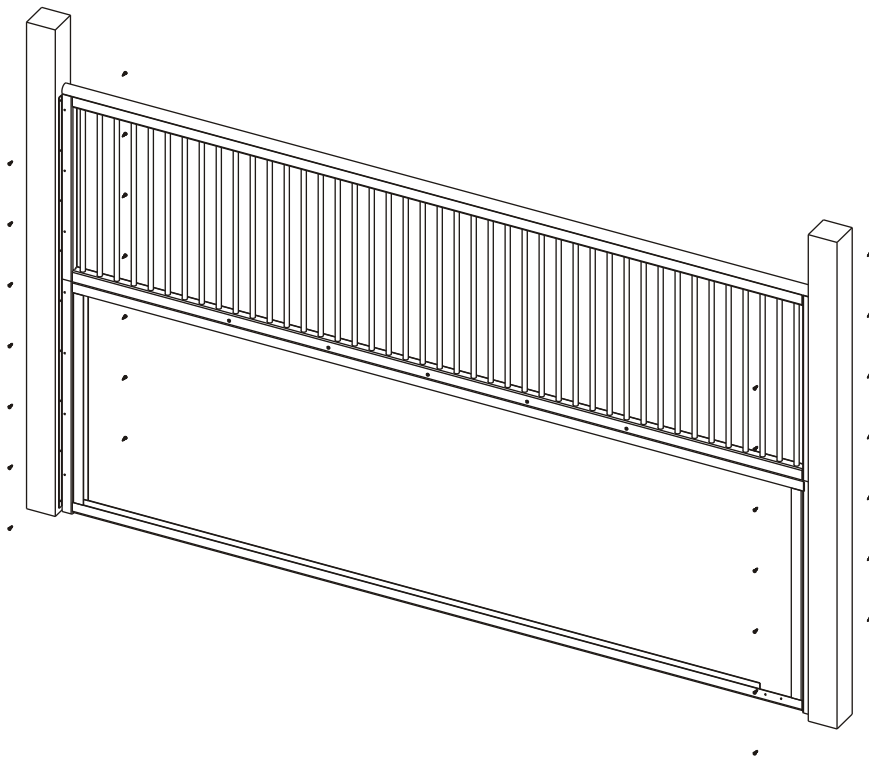

Install Wood

2 x 6 tongue and groove boards are recommended.

Cut boards to length to fit inside the channels (approx. 45").


Slide boards into channels using a rubber mallet to secure each board into place.

The tongue should be ripped off the last two boards in order to fit into place.

NOTE: The last board may need to be ripped down to fit.

Fasten the last two boards in place from the front side using supplied SS1 screws through holes in the bottom channel.

Place the wood cover plate over the cutout in the bottom channel on the back of each stall front panel and fasten to boards with supplied SS1 screws.

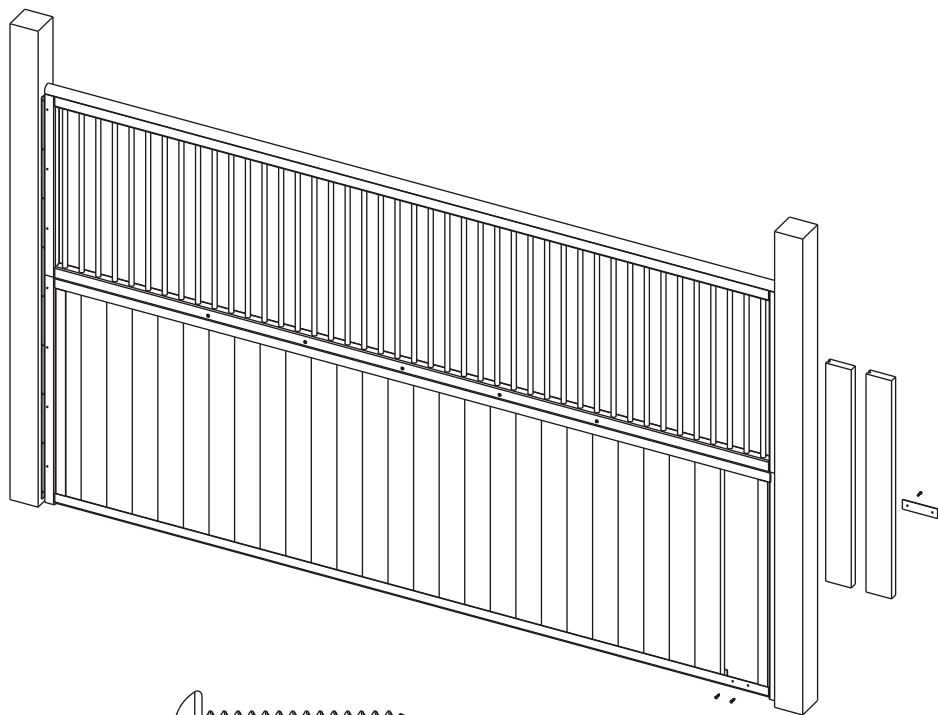

SS1 Screw